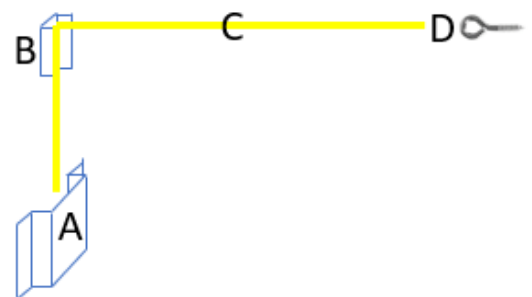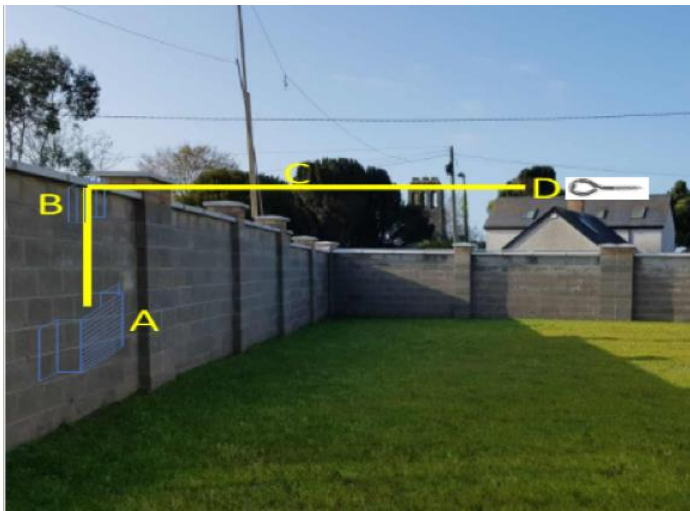# Peg's Line

Hello, my name is Peg, and I would like to thank you for purchasing **Pegs line Complete Clothesline System.**

After years of battling with many types of clotheslines, I have finally found the perfect solution to all typical washing line problems. With my carefully crafted **Winder system** securely attached to a wall, I can raise and lower my washing very easily to a suitable height and tension, but make sure you don't over tighten it, and if you need further information, please visit our Facebook or Instagram page @pegsline or #pegsline. You can also get in touch by email pegsline@outlook.com

So, here is how to install it.

Firstly, position the **Winder** (**A**) to your required height (height can be high for out of reach of little hands) and secure the bracket with 4 screws and rawl plugs provided, you need a 10mm drill bit. Position the **Pulley System** (**B**) above the winder to the height you want your clothesline to be positioned at. Secure the Pulley with 2 screws and rawl plugs provided. For the **Eye Hook (D),** an 8mm drill bit is needed for masonry or timber, depending on your securing wall on the opposite side at a similar height to the pulley. Unwind the 50ft Orient **Clothesline** (**C**) (note length required to allow for adjustments in the line later, 50ft is a little over 15 meters) and feed it through the hole located in the middle of the **Winder** (**A**) tie a small knot to prevent it from passing back through. Feed the clothesline through the **Pulley System** (**B**) and fix it securely to the **Eye Hook (D)** on the opposite side, leaving enough slack to allow you to wind up and lower down the clothesline. When the clothesline is up and your clothing hung out, ensure you raise the clothesline up and secure the winding mechanism by gently sliding the locking bar across in front of the winder handle.

And that's all there is too it…. ☺

Feed **C** up through **A** across to **B** and secure at **D.**

Instructions:
A: Winder
B: Pulley
C: Line
D: Eye Hook